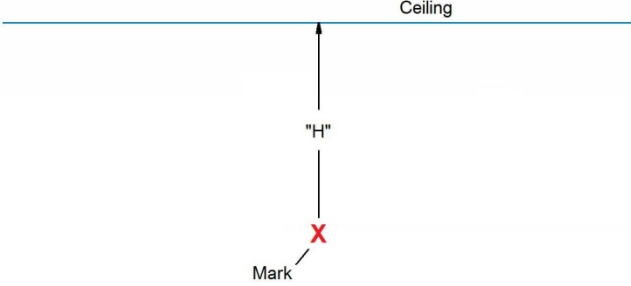

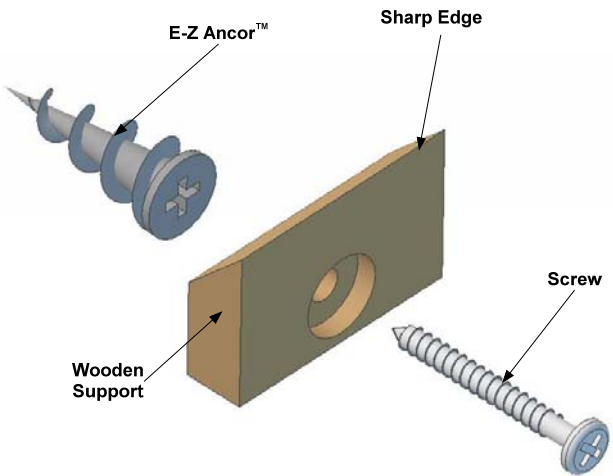
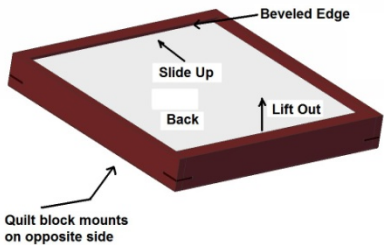


HANGING INSTRUCTIONS – Shadow Box

COMMITMENT TO EXCELLENCE

We want you to be pleased with our products and service, so if you need assistance, have any suggestions, or are not pleased with your purchase, please contact us in any way listed below:

Phone (937) 506-0032
E-mail info@quiltdisplayproducts.com
Website www.quiltdisplayproducts.com

Step 1 – Marking the location	Step 2 – Installing the anchor
<p>Mark a location on the wall at any distance “H” from the ceiling where you want to mount your shadow box.</p> 	<p>Use a Phillips screwdriver to insert the E-Z Ancor™ at the marked location on the wall. Be sure after tightening, that the surface of the E-Z Ancor™ is flush with the wall.</p>  <p>The E-Z Ancor™ is designed to be installed into drywall, or drywall backed by a wooden stud. If this is too difficult for you, remove the E-Z Ancor™ and drill a 1/8” hole into the wall, and then reinsert the E-Z Ancor™.</p>
Step 3 – Installing the wooden support	Step 4 – Mounting your quilt block
<p>Use the screw provided to attach the wooden support to the E-Z Ancor™.</p> <p>Position the support such that the sharp edge is pointing toward the ceiling and away from the wall.</p> <p>Be sure the sharp edge is parallel with the ceiling when tightening the screw.</p> 	<p>Slide the back up into the top of the shadow box under the beveled edge until the bottom is free. Remove it and mount your block to either the white or a black side.</p> <p>Use the matching colored Velcro to mount your block at each corner, making sure it is center on the back. Then reinstall the back so your quilt is showing in the deepest part of the frame.</p>  <p>Place the beveled edge of the shadow box on the wooden support you attached to your wall. You can slide the box left or right about 1/4 inch which is a nice feature if you are trying to line up more than one in a vertical fashion.</p> <p>If your shadow box appears crooked on the wall, simply loosed the support, reposition it and tighten it again as described in Step 3.</p>